

# HOPPER TRANSPORT TROLLEY & LIFT FRAME

## General

The Hopper Lift Frame & Transport Trolley are designed to enable simple removal and transportation of the central Hopper (product contact) portion of a Matcon IBC Discharge Station.

## Hopper Removal – Lift Frame

The Lift Frame fits onto the forks of a forklift or pedestrian stacker truck. Two chains with hooks are attached to the lifting eyes on the Discharge Station Hopper and the unit simply lifted clear of the Station Frame (quick release fittings enable the services to be unplugged before removal).


## Hopper Transport Trolley

Once removed from the Station, the Hopper may be placed into the Transport Trolley, where it is clamped securely. The Trolley enables the Hopper to be pushed manually to a location for manual cleaning, thus avoiding the need to use the forklift. The Hopper support on the Trolley may be inverted or inclined in order to allow full cleaning access to all the surfaces.




Certified lift capacity 100 kgs/pair

## Lift Frame

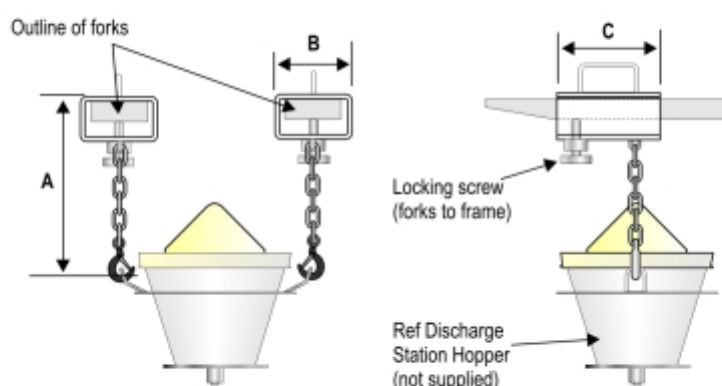

| dimension | A   | B   | C   |
|-----------|-----|-----|-----|
| mm        | 491 | 200 | 300 |
| inches    | 19  | 8   | 12  |

## Transport Trolley

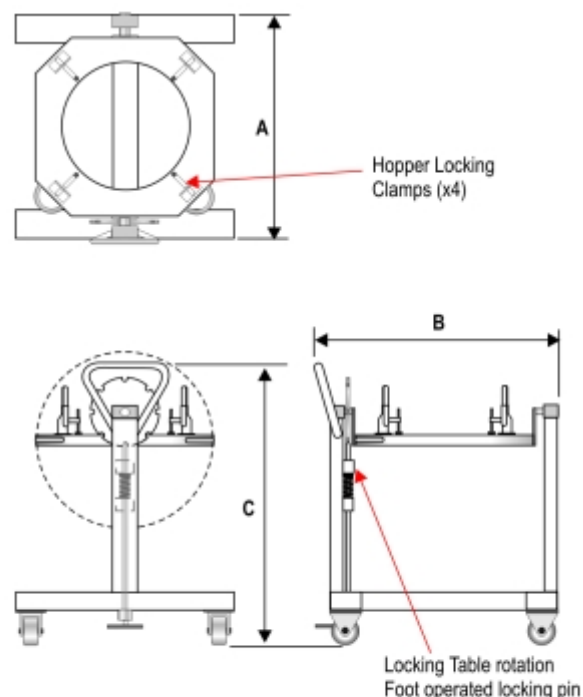

| dimension | A   | B   | C    |
|-----------|-----|-----|------|
| mm        | 858 | 896 | 1009 |
| inches    | 34  | 35  | 40   |